# **LUXE**SPA<sup>TM</sup>

Personal Ultrasonic Jewelry & Eyeglass Cleaner





Instructions for Use & Safety Precautions FOR INDOOR USE ONLY

**IMPORTANT:** Before using the **GEM**ORO **LUXE**SPA please be certain to read the following pages including the specified safety precautions.

## ADVANCED PROFESSIONAL FEATURES:

- True professional grade ultrasonic jewelry and eyeglass cleaner for the home
- Approximate 24oz (700ml 0.74qt) tank capacity, MAX fill 20oz (600ml - 0.63.5qt)
- Tank size (inches): 6.6" x 3.9" x 2.2"
- Higher frequency, super powerful 42KHz energy producing sound waves per second
- Enhanced power A+B transducer with German technology, provides 15% greater power
- Waterproof touch sensor control panel with blue digital timer
- 4 Cleaning cycle options (minutes) -1.5 (90S), 3 (180S), 5 (280S), 6.5 (380S), and 8 (480S)
- Auto shut-off function
- Safely cleans most jewelry and eyeglasses using tap water.
  For best results when cleaning most jewelry, add GEMORO SUPER CONCENTRATED CLEANING SOLUTION quart bottle 40:1 dilution ratio (Item #0901 sold separately)
- Bright blue LED illuminated stainless steel tank
- Transparent evaporation-free cover/lid

- Quiet solid-state circuitry
- Elegant European contoured styling in designer white color with chrome accent
- Removable basket and bracelet/watch holder included
- 50/60HZ
- One Year Limited Replacement Warranty

## GEMORO LUXESPA

- 1. Ultrasonic tank
- 2. Transparent evaporation-free cover/lid
- 3. Touch sensor control panel: ON/OFF and TIMER buttons
- 4. Bright blue LED tank illuminator light
- 5. Basket
- 6. Bracelet/watch holder



### THE FIVE BASIC STEPS:

**STEP 1** – Unpack the **GEM**ORO **LUXE**SPA, basket and bracelet/watch holder from its box and plastic wrapping.

**STEP 2** – Connect it to a suitable electrical power source. DO NOT turn the ultrasonic on before filling the tank up with water.

STEP 3 - To open the GEMORO LUXESPA transparent cover/lid, lift the handle (located on the front, center of the cover/lid) to expose the tank. Add the appropriate amount of water and/or mixture of water and optional cleaning solution to the tank. Fill the solution level to the MAX fill line as clearly marked on the rear center portion of the stainlesssteel tank wall. DO NOT allow the water to evaporate below this level or fill the tank above this level as damage may occur. For general cleaning, while regular tap water may be used, for enhanced results we recommend adding **GEM**ORO SUPER CONCENTRATED CLEANING SOLUTION to the water (Item #0901 sold separately). It uses special brighteners and cleaning agents and is known as the best professional ultrasonic jewelry cleaning solution available. DO NOT use flammable liquids, ammonia or acid/water mixtures in the ultrasonic tank as damage may occur and the warranty will become void. Keep the evaporation-free cover closed when not in use to reduce solution evaporation.

## STEP 4 - BEFORE CLEANING JEWELRY READ SECTION

"What May & May Not Be Cleaned In An Ultrasonic". Place the item to be cleaned in the supplied basket and then submerge it in the tank and close the cover. (As a suggestion, in the event small items such as diamond ear studs, charms or small pieces of jewelry require cleaning, a household stainless steel tea strainer or fine mesh stainless steel basket may be used to hold these items safely during the cleaning process, with the tea strainer then being placed in the supplied basket.) **GEM**ORO Diamond Saver Basket (sold separately Item #0373) is recommended. To clean bracelets or metal watchbands, use the included holder that is designed for this function, while placing the holder in the basket to prevent it from touching the bottom of the tank. The watch holder will also prevent the head/movement of the watch from being submerged (tighten watch stem before cleaning). DO NOT place items to be cleaned directly on the tank bottom as damage to the transducer may occur. Damage to the transducer because of placing items on the bottom of the tank will void the warranty. Dents and scars on the bottom of the tank is evidence of items being placed inappropriately in the tank without a basket.

**STEP 5** – While plugged in, press the timer button to scroll through the five cleaning cycle times of 1.5 (90S), 3 (180S), 5 (280S), 6.5 (380S), and 8 (480S) minutes. Press the > button to start the cleaning process. Once the cleaning cycle has ended the ultrasonic will automatically shut off.

Items that require additional cleaning may be left in the basket within the tank and the process repeated. Once the cleaning process has been completed, always rinse the item off with tap water to remove the remaining solution (as it may irritate your skin) and to dislodge/remove any remaining loosened dirt from its surface. DO NOT place fingers or other body parts in the tank while the ultrasonic is operating.

IMPORTANT: READ THIS SECTION BEFORE CLEANING JEWELRY

## WHAT MAY & MAY NOT BE CLEANED IN AN ULTRASONIC

• Typically, items such as gold, silver, platinum, diamonds, rubies, sapphires, amethyst, citrine etc., are safe for ultrasonic cleaning. Be careful not to clean stones that may have many inclusions (example: emeralds), because the ultrasonic sound waves coupled with the sudden change in temperature may crack the stone. Be certain not to clean soft, water porous stones (such as pearls, opals, turquoise, amber, ivory etc.) as they too may be damaged. For additional or more specific information on which stones are suitable for cleaning in an ultrasonic other than what is listed below, we suggest you contact a professional jeweler, gemologist or The Gemological Institute of America (GIA). It is recommended that you do not place micro-pave set diamond jewelry in an ultrasonic. To clean metal watchbands, use the included holder that is designed for this function, while placing

the holder in the basket to prevent it from touching the bottom of the tank. We suggest you contact an optician before cleaning your eyeglasses to verify whether your frames are suitable to be safely cleaned in an ultrasonic. Watches should be placed on the holder with the head/movement of the watch suspended above the water in the tank to prevent potential damage due to a possible poor water seal or weak gasket in the watch. Never place a non-waterproof watch in water or in this ultrasonic and only place the metal band of the watch in the water. Before attempting this, at your own risk always be certain the watches stem is fully inserted and/or screwed all the way in.

PRELIMINARY GUIDELINE FOR GEMSTONE CLEANING		
GEMSTONE	TOUGHNESS	ULTRASONIC
Alexandrite	excellent	usually
Amazonite	poor	never
Amber	poor	never
Amethyst	good	usually
Aquamarine	good	usually
Citrine	good	usually
Coral	fair	risky
Diamond	good	usually
Emerald	poor	never
Garnet	fair	usually
Iolite	fair	risky
Lapis Lazuli	fair	risky
Opal	fair	never
Pearl	good	never
Peridot	fair	risky
Ruby	excellent	usually
Sapphire	excellent	usually
Spinel	good	usually
Tanzanite	fair	never
Topaz	poor	never
Tourmaline	fair	risky
Turquoise	fair	never
Variscite	fair	never
Zircon	fair	risky

- After first unplugging the GEMORO LUXESPA, periodically change the solution and clean the tank.
- With the **GEM**ORO **LUXE**SPA unplugged and the cover/ lid up, take the basket out of the tank and then grasp the ultrasonic with both hands and with the cover/lid open. Then carefully pour out the old solution into your sink and drain. Wash all dirt and residue from the tank's bottom with clean tap water and a standard household non-ammoniated, non-acidic cleaning solution or stainless-steel cleaner and a paper towel. Rinse the tank out with clean tap water while being careful not to allow water to overflow onto other parts of the machine as damage to its electronics may result and the warranty will become void.
- The GEMORO LUXESPA outer shell may also be cleaned using a standard household non-ammoniated, non-acidic, non-abrasive cleaning solution suitable for use with ABS plastic and a paper towel. After cleaning the outer shell, wipe off the remaining solution with clean tap water. Avoid placing too much cleaning solution on the outer shell as the excess solution may seep into the ultrasonics' electronics potentially causing damage. DO NOT submerge the GEMORO LUXESPA into water as damage to its electronics may result and the warranty will become void.

#### WARRANTY

Congratulations on your purchase of the **GEMORO LUXESPA** personal ultrasonic jewelry and eyeglass cleaner! In the unlikely event of a defect in material or workmanship of the unit, your ultrasonic features a ONE YEAR LIMITED REPLACEMENT WARRANTY. This warranty is valid from the date of its purchase assuming the purchaser fills out the WARRANTY REGISTRATION FORM at www.gemoroproducts. com/warrantyregistration within 30 days of its purchase. If this criterion is not followed, the **GEM**ORO **LUXE**SPA will automatically be covered by a 90 DAY LIMITED WARRANTY from the date your ultrasonic was purchased, as noted on the bill of sale (if supplied) or through the **GEM**ORO **LUXE**SPA serial number tracking system as interpreted by the factory. In the event the **GEM**ORO **LUXE**SPA is no longer available or has been discontinued and warranty coverage is applicable, at the factory's sole discretion, an equivalent ultrasonic cleaner may be substituted in place of the defective **GEM**ORO **LUXES**PA. The purchaser shall incur the cost for return postage, insurance and handling for all warranty and non-warranty repairs. Warranty repairs and/ or replacements will be shipped back to the customer FOB Destination to the location of the customer's choosing if within the continental United States. Non-warranty repairs will be shipped back to the customer FOB Factory. Should the customer require the repair and/or replacement unit(s) to be shipped outside the continental United States, the customer

will be required to pay any related shipping charges and any related taxes/duties for the respective destination country, regardless of whether it is a warranty or non-warranty claim.

IMPORTANT DISCLAIMER: No warranties exist with respect to the GEMORO LUXESPA or its use other than those expressly contained herein. All other warranties of any kind or character whatsoever, whether expressed or implied, including warranties of merchantability or fitness for a particular purpose, are hereby disclaimed and are excluded from the warranties hereunder. In the event a claim is made with respect to the GEMORO LUXESPA or its use, the maximum liability of GEMORO and its affiliates, dealers and distributors shall be the amount paid for the GEMORO LUXESPA.



10455 Olympic Drive, Dallas, Texas 75220 USA 800.527.0719 or 214.351.0380 gemoroproducts.com sales@gemoroproducts.com